



# BLOWER RESISTOR

## ON-VEHICLE INSPECTION

- 1. **INSPECT BLOWER MOTOR CONTROL**
  - (a) Measure the resistance of the blower resistor.  
**Standard resistance**

| Tester Connection | Specified Condition |
|-------------------|---------------------|
| 1 - 2             | 1.45 to 1.67 Ω      |
| 1 - 3             | 0.52 to 0.60 Ω      |
| 1 - 4             | 3.12 to 3.60 Ω      |

If the resistance is not as specified, replace the blower motor control.